


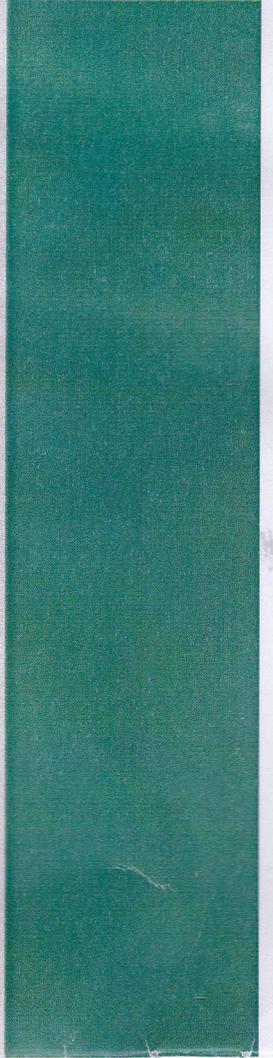

INSTRUCTION MANUAL

INFRARED SAUNA ROOM

MODEL : WS-120105SR





Attention

1. Users should read through this manual before assembly and use.
2. The product must install a reliable earth line and electricity leak protection.
3. Users should install power supply according to actual condition.
4. Patients with hypertension or drunk are not permitted to use this products.
5. Adult guidance is necessary for children or under age to use sauna.
6. Corrosive liquid are not allowed to bring into the room.
7. Sauna room must not over working for long time. The heat pipe may damage of long time heating.
8. Our company would not take responsibility if the product is damaged but caused by violating the normal operating procedures.
9. When the product is discarded, please deal with it according to local law.

Technical parameters


1. rated voltage: AC220-240V 50Hz/60Hz
2. Power of Sauna heater: 1750W
3. Size: 1200x1050x1900mm

Sketch

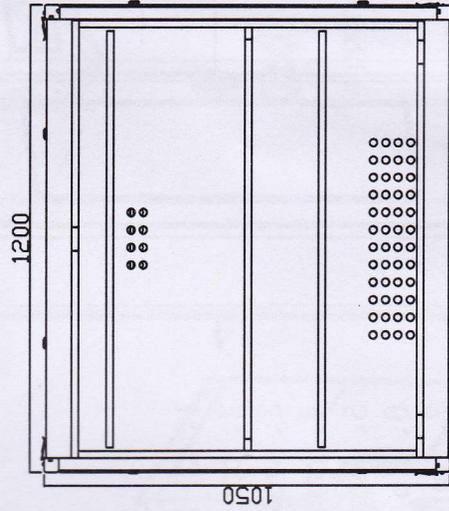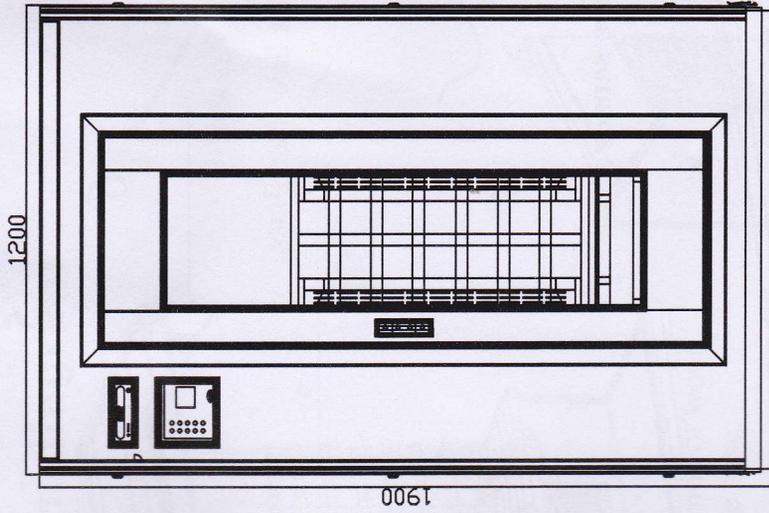


SIZE: 1200 × 1050 × 1900mm

Installation diagram

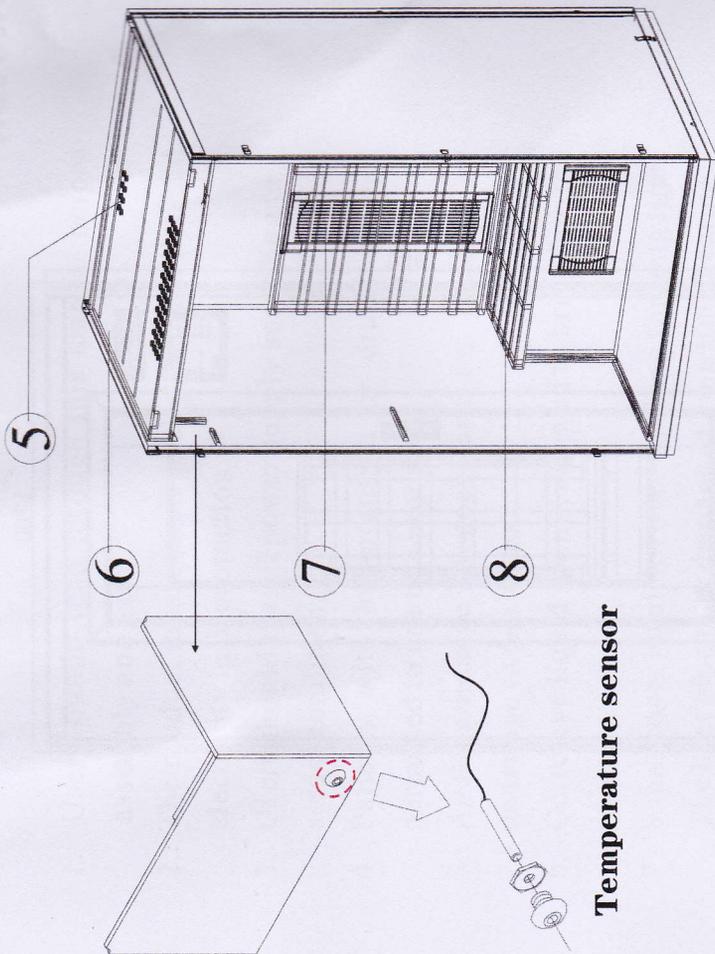


Temperature sensor

- 1、 CD-ROM
- 2、 control panel
- 3、 wooden door
- 4、 handle
- 5、 Ventilation windows
- 6、 Roof
- 7、 infrared heat pipe.
- 8、 wooden seat

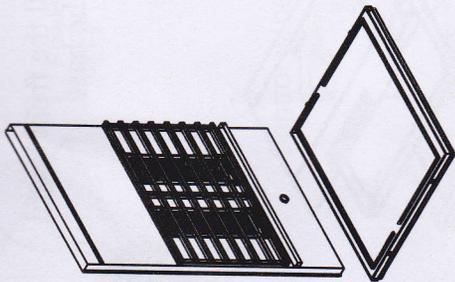



install back wall and base.

D1

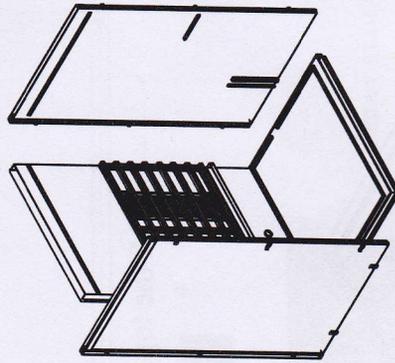

install both side of wood boards to the base.


D2

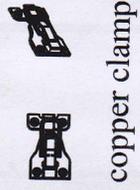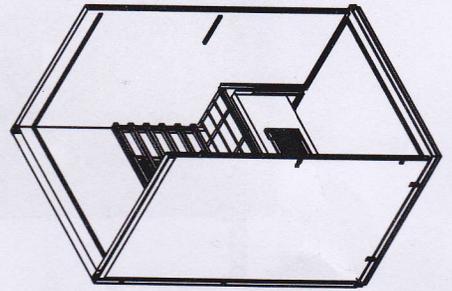


copper clamp

D3

Circuit

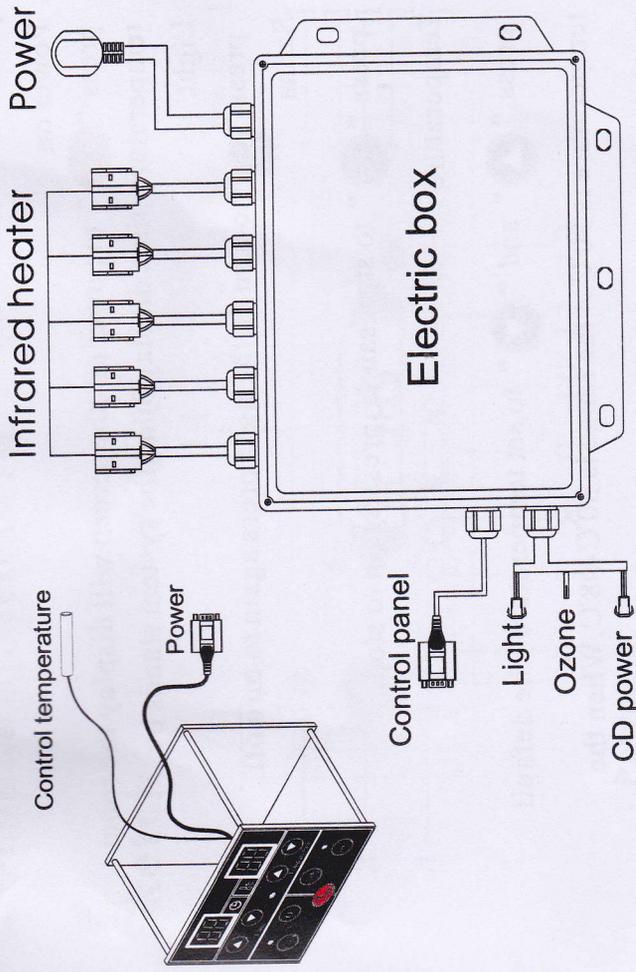


Control panel

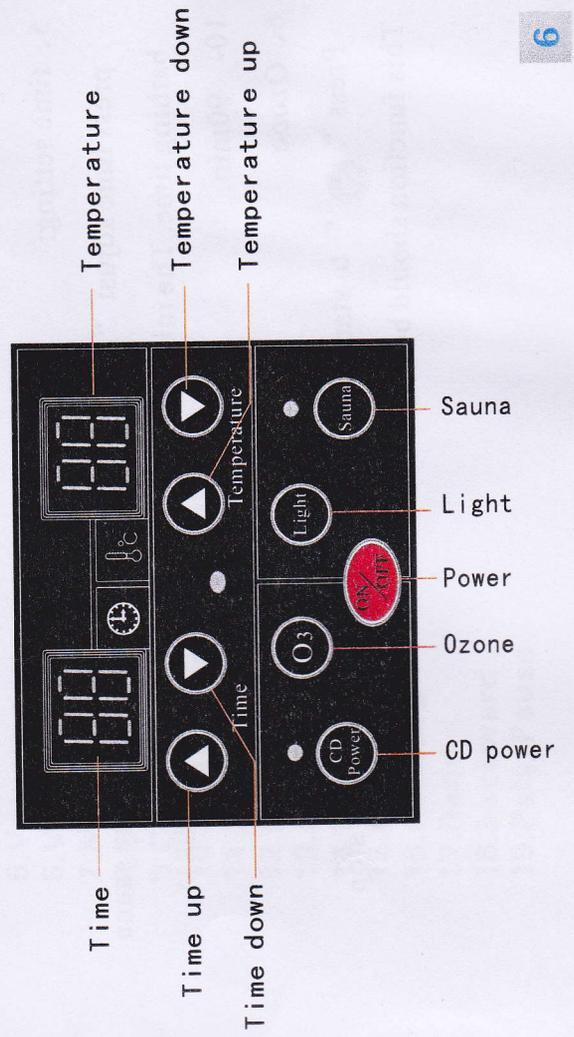


install the front board to the base.

D4

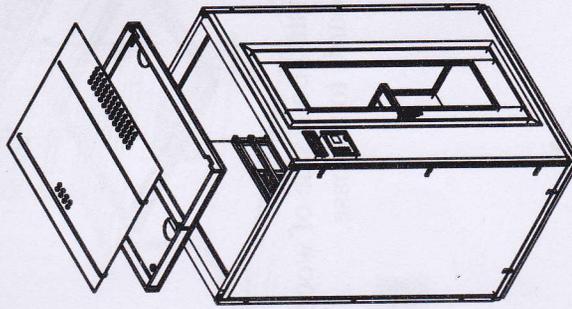

install the top.

D5

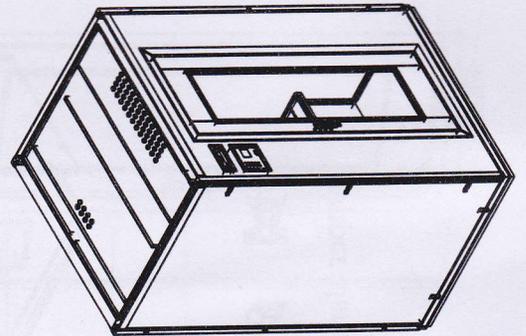

installation completed.


D6

Operation

1. Power on
press “” to power on, the screen will display the room temperature, time display 30m, the system stands by.
2. Light
press “” to turn on the light, press again to turn off.
3. Sauna
press “” to start sauna, press again to stop.
4. Temperature
press “” and “” to set temperature. The default temperature is 50°C, the range is 30°C-98°C. When the displayed temperature is higher than the setting temperature, the sauna heater will stop work.
5. time setting:
press time adjust “” and “” button to set up the sauna bathing time. The initial default time is 30 min, time range is 10- 90min.
6. Ozone
Press “” to start ozone sterilization, press again to stop. This function should be used after sauna bath is finished.

7. CD/AM、FM
Press “” to turn on the power of CD/AM/FM, then press “” in the CD player to play CD/AM/FM.

Sketch

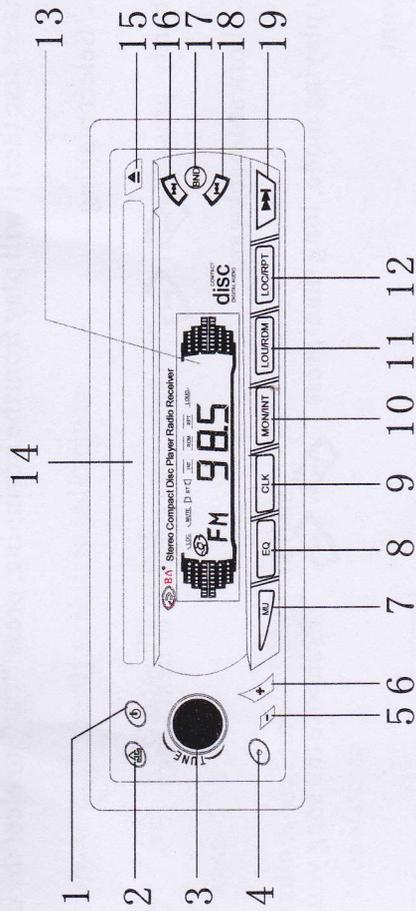

1. Power
2. REL panel lock
3. Tune
4. Audio mode
5. Volume down
6. Volume up
7. Mute
8. EQ mode
9. Clock
10. Mono/Stereo/Playing list
11. Balance/Auto play
12. Long-range/local/repeat
13. display
14. Disc insert
15. Disc eject
16. Forward
17. Band
18. backward
19. Paly/Pause

8. CD

A. Insert, eject disc

Insert disc then it will play from the beginning, press " to eject the disc.

B. Select playing

Shortly press " , 

C. Forward/backward

In playing mode, long time press " , 

D. Song display

In playing mode, press " " to play the first 10 seconds of each songs, when find what you want, press this key to play it.

E. Repeat playing

In playing mode, press " " to repeat playing, press again to cancel.

F. Auto play

In playing mode, press " " 2 seconds to auto play the songs, press again to cancel auto play.

G. Disc play

Press " " to shift to CD mode. Press " " to pause, press " " again to continue playing CD.

9. FM Raido

A. press " " shortly to shift to radio mode.

press " " to choose FM or AM.

B. Tune

In radio mode, turn " " to tune.

C. Mono/stereo

In FM mode, press " " to choose mono or stereo.

D. Local/long-range radio

In FM mode, press " " to choose local radio or long-range radio.

E. Volume

Press " ,  " to adjust volume, press " " to mute, press again to recover.

F. Audio mode

Press " " to choose volume (VOL), bass (BAS), tremble (TR

E), balance (BAL), surround (FAD)

Press “+” and “-” to choose audio mode.

Note: if you set the EQ mode, BASS and TREBLE will not work.

E、Balance

Press “” to get better BASS effect.

F、Time display

Press “” to display the time.

Press “” two seconds, hour and minute digits will display on the screen, press “” to set hour, press “” to set minute.

- No advanced advice will be submit before we change our design and size.
- The pictures may be a little different from the real products.
- Our company keep the final explanation right.



Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.